

PINBALL SIDE BUTTONS INSTALLATION INSTRUCTIONS

FOR COMPLETE VIDEO INSTRUCTIONS PLEASE VISIT

<https://youtu.be/2Hu0ll3n5DE>

TOOLS REQUIRED:

Power Drill with a 3/16" Drill bit attachment and a Phillips head attachment

STEP 1: Remove your Xtension controller from your cabinet. Failure to do so will damage your controller.


STEP 2: On both sides of your cabinet, note where on your cabinet you would like to place your pinball side buttons, and mark with a pencil or marker where you want to drill your hole. Then drill a 3/16" hole into the side of your cabinet in your desired location.

STEP 3: Place your USB Control Box centered on the fixed shelf of your cabinet and feed the button wires through your drilled hole on each side.

STEP 4: Attach your button wires to the buttons as shown in the example diagram to the right. NOTE: It does not matter what connection prong on each button you use for each lead wire (colored wires) or the ground wires (black wires) as long as you connect one colored wire and one black wire to each button.


STEP 5: Proceed to attach your pinball side button boxes to the side of the cabinet using the included black phillips head screws and your power drill (with phillips head attachment), secure the pinball side button boxes to your cabinet.

STEP 6: Connect the USB cable to your USB controller box, then connect the other side of the USB cable to your PC. Then put your controller back into your cabinet.

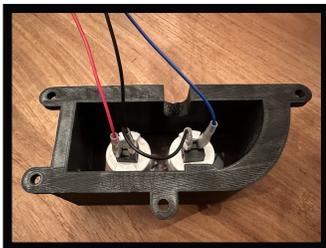

IMPORTANT: If you have custom side graphics on your cabinet, PLEASE DO NOT OVER TIGHTEN YOUR SCREWS WHEN ATTACHING THE PINBALL BOXES!

XTENSION
Premium Arcade Gaming Equipment™

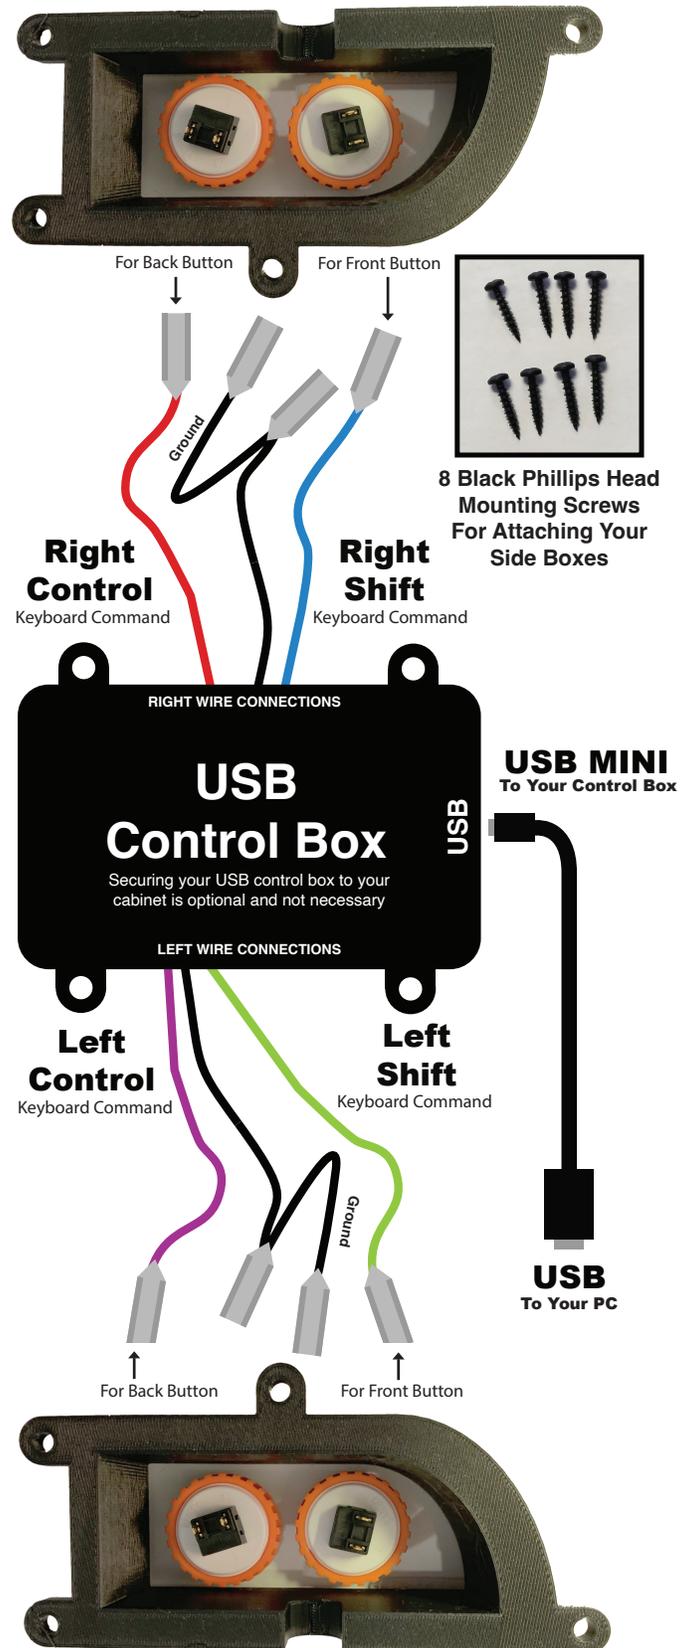

NOTE: IT DOES NOT MATTER WHICH PRONG THE COLORED WIRES ARE CONNECTED TO, AS LONG AS THEY ARE PLUGGED INTO THE CORRECT FRONT OR BACK BUTTON.